

# Installation Instructions



## 06'+ Civic Sport Pedals (Automatic)

SK06-HPDL-CAT04

<b>Contents:</b>	1x Gas Pedal	4x Self-tapping screws
	1x Brake Pedal	4x Bolts
	1x Brake Rubber Insert	6x Locking Nuts
		2x Long Nuts

**Tools Required:** 7mm socket wrench, Phillips screw driver or power drill with Phillips attachment

**Disclaimer:** Please use caution and proper safety equipment when using power tools, Strut King and its affiliates are not responsible for any injuries occurred during installation.

1.



Place the stainless steel gas pedal cover over the existing plastic pedal. Using the Phillips screw driver or power drill, install the first self-tapping screw into the middle location 1. Once location 1 is installed, proceed with locations 2 through 5.

2.




Remove the stock rubber pads on the brake pedal to reveal the existing mounting holes.

3.



Using the bolt and locking nut, secure the brake pedal using a Phillips screw driver and 7mm socket wrench to tighten.

4.

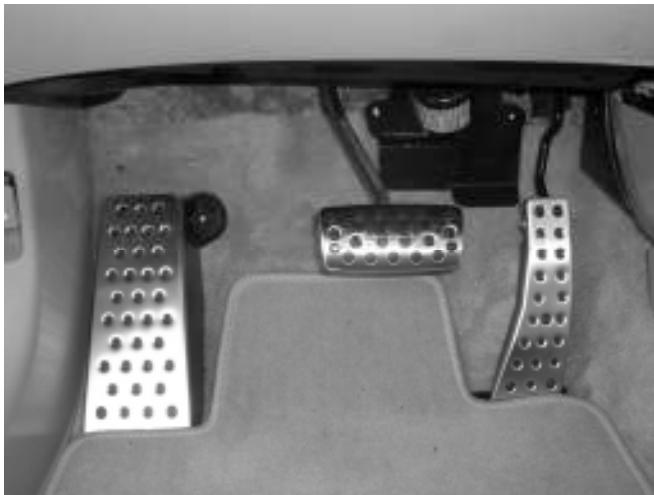


Place the stainless steel footrest cover over the existing plastic footrest.

5.



Place the self-tapping screws into the locations shown and use the Phillips screw driver or power drill with Phillips attachment to properly mount the footrest.

6.

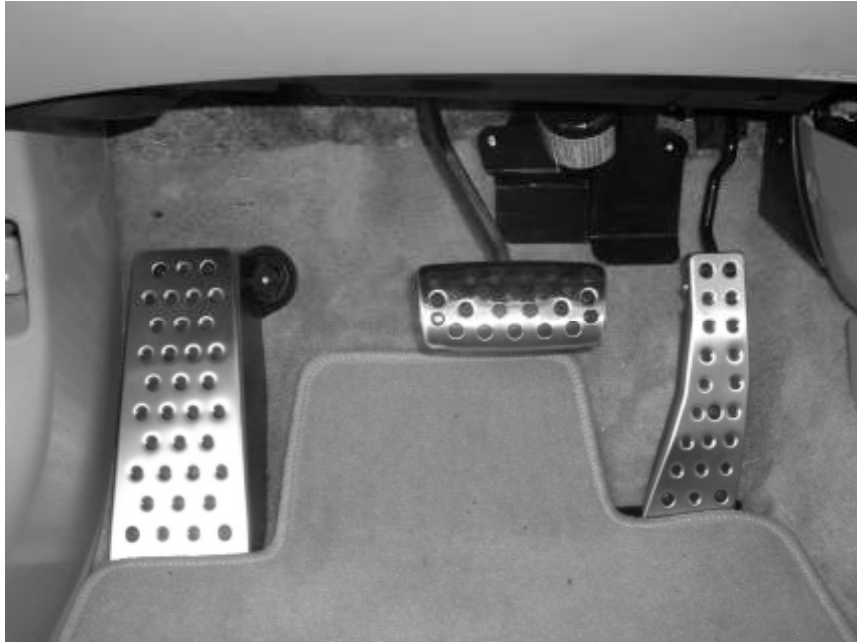

**The end result should look as follows.**