

# Installation Instructions



## 06'+ Civic Sport Pedals (Manual)

SK06-HPDL-CMT03

<b>Contents:</b>	1x Gas Pedal	9x Self-tapping screws
	1x Footrest	6x Bolts
	2x Brake/Clutch Pedal	6x Locking Nuts
	2x Brake/Clutch Rubber Insert	1x Drill Bit

**Tools Required:** 7mm socket wrench, Phillips screw driver or power drill with Phillips attachment

**Disclaimer:** Please use caution and proper safety equipment when using power tools, Strut King and its affiliates are not responsible for any injuries occurred during installation.

1.



Place the stainless steel gas pedal cover over the existing plastic pedal. Using the Phillips screw driver or power drill, install the first self-tapping screw into the middle location 1. Once location 1 is installed, proceed with locations 2 through 5.

2.



Remove the stock rubber pads on the brake & clutch pedal.

3.



Place one of the brake/clutch pedals over the clutch to use as a template. Using the provided drill bit, drill the 3 holes needed.

The brake pedal has existing holes that need to be enlarged. Using the provided drill bit, enlarge the existing holes to the needed size.

4.



Using the bolt and locking nut, secure the brake & clutch pedals using a Phillips screw driver and 7mm socket wrench to tighten.

5.




Place the stainless steel footrest cover over the existing plastic footrest.

6.



Place the self-tapping screws into the locations shown and use the Phillips screw driver or power drill with Phillips attachment to properly mount the footrest.

7.

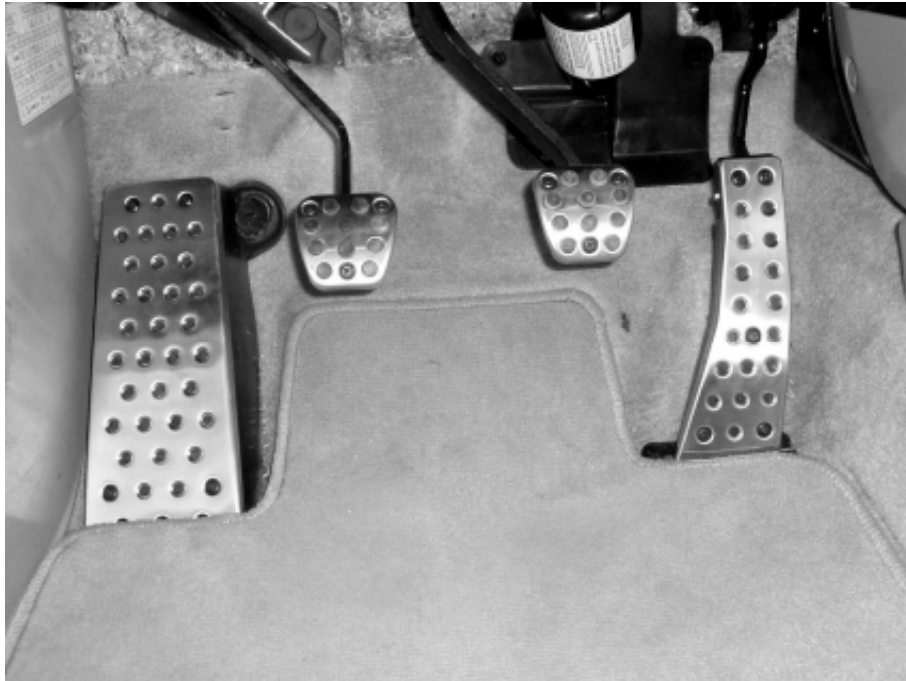

The end result should look as follows.