

Installation Instructions



06'+ Fit Sport Pedals (Automatic)


SK06-HPDL-FAT10

Contents:	1x Gas Pedal	4x Self-tapping screws
	1x Brake Pedal	4x Bolts
	1x Brake Rubber Insert	6x Locking Nuts
		2x Long Nuts

Tools Required: 7mm socket wrench, Phillips screw driver or power drill with Phillips attachment

Disclaimer: Please use caution and proper safety equipment when using power tools, Strut King and its affiliates are not responsible for any injuries occurred during installation.

1.

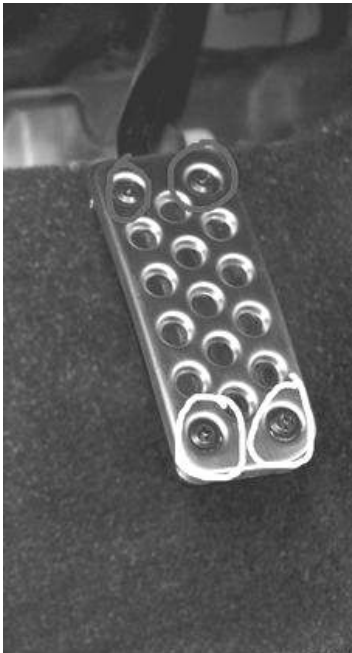

Place the stainless steel gas pedal cover over the existing plastic pedal. Using the power drill, drill 4 holes with the provided drill bit according to the install points as shown. And install the self tapping screws.

(Note: Bottom two holes may need the long bolts depending on model year.)

2.



Remove the stock rubber pads on the brake pedal and place the brake pedal with rubber insert onto the pedal. Drill the 4 holes into the brake pedal and install with the bolts & locking nuts