

# Installation Instructions



## 02'+ RSX Sport Pedals (Automatic)

SK06-HPDL-RAT02

<b>Contents:</b>	1x Gas Pedal	10x Self-tapping screws
	1x Footrest	6x Bolts (4 short, 2 long)
	1x Brake Pedal	6x Locking Nuts
	1x Brake Rubber Insert	1x Drill Bit

**Tools Required:** 7mm socket wrench, Phillips screw driver or power drill with Phillips attachment  
**Disclaimer:** Please use caution and proper safety equipment when using power tools, Strut King and its affiliates are not responsible for any injuries occurred during installation.



Place the stainless steel gas pedal cover over the existing plastic pedal. Using the power drill, drill 4 holes where at the mounting locations on the pedal. Install the two self-tapping screw onto the top locations. The bottom two holes require the use of the longer bolts & nuts. They should extend out the opposite end just enough for the nuts. The self tapping screws can be used on the bottom two mounting locations but the use of nuts & bolts are highly suggested.




Remove the stock rubber pads on the brake pedal.

3.



Using the bolt and locking nut, secure the brake pedal using a Phillips screw driver to hold it in place and 7mm socket wrench to tighten.

4.

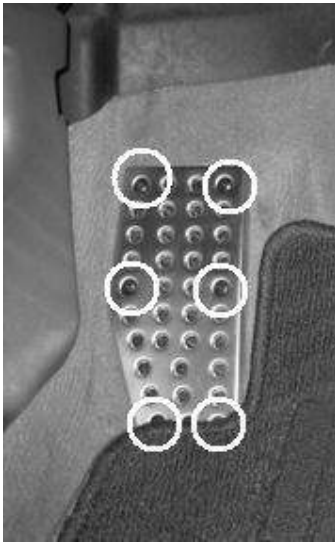

Place the stainless steel footrest over your existing footrest and use the self-tapping screws to install on the locations shown on the picture. Use a Phillips screwdriver or a power drill with Phillips attachment to properly mount the footrest.