

Installation Instructions



02'+ RSX Sport Pedals (Manual)

SK06-HPDL-RMT01

Contents:	1x Gas Pedal	10x Self-tapping screws
	1x Footrest	8x Bolts (6 short, 2 long)
	2x Brake/Clutch Pedal	8x Locking Nuts
	2x Brake/Clutch Rubber Insert	2x Drill Bit

Tools Required: 7mm socket wrench, Phillips screw driver or power drill with Phillips attachment

Disclaimer: Please use caution and proper safety equipment when using power tools, Strut King and its affiliates are not responsible for any injuries occurred during installation.

1.



Place the stainless steel gas pedal cover over the existing plastic pedal. Using the power drill, drill 4 holes where at the mounting locations on the pedal. Install the two self-tapping screw onto the top locations. The bottom two holes require the use of the longer bolts & nuts. They should extend out the opposite end just enough for the nuts. The self tapping screws can be used on the bottom two mounting locations but the use of nuts & bolts are highly suggested.

2.



Remove the stock rubber pads on the brake & clutch pedal.

3.



Place one of the brake/clutch pedals over the clutch to use as a template. Using the provided drill bit, drill the 3 holes needed.


The brake pedal has existing holes that need to be enlarged. Using the provided drill bit, enlarge the existing holes to the needed size.

4.



Using the bolt and locking nut, secure the brake & clutch pedals using a Phillips screw driver and 7mm socket wrench to tighten.

5.

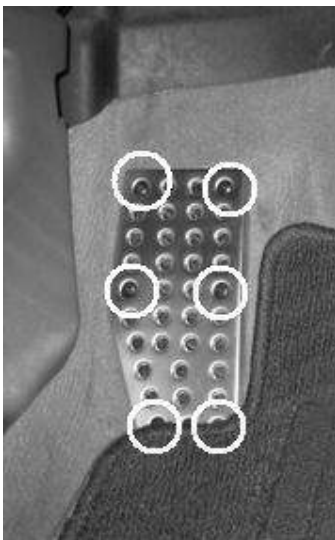

Place the stainless steel footrest over your existing footrest and use the self-tapping screws to install on the locations shown on the picture. Use a Phillips screwdriver or a power drill with Phillips attachment to properly mount the footrest.